


# MODEL "D" or "DR"

INSTALLATION INSTRUCTIONS  
FOR  
CHANDLER & PRICE GORDON  
BRANDTJEN & KLUGE PRESSES

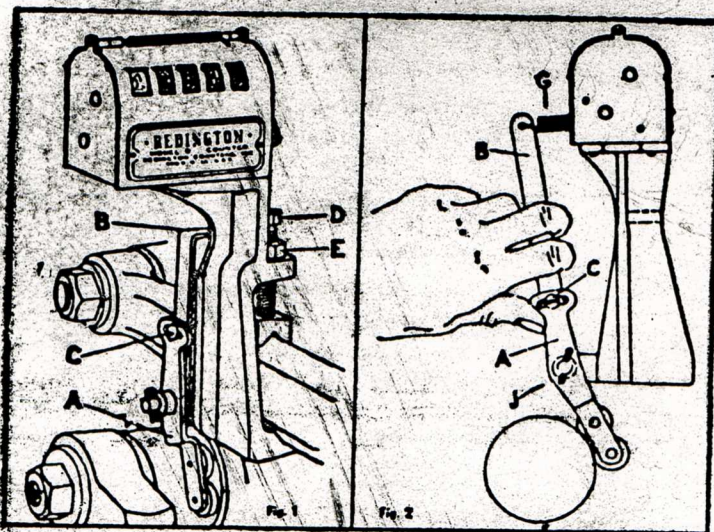

**FIRST** — Close printing press, with impression.

**SECOND** — Attach counter as shown in cut, (fig. 1) so that the rollers on lever A touch eccentric-shaft. Then tighten up screw D, being careful to keep it perpendicular.

**THIRD** — Loosen screw C. Pull back lever B till counter counts, push forward lever A till rollers touch eccentric-shaft, as shown in cut, (fig. 2) and tighten screw C.

**FOURTH** — Turn press over slowly, and if everything is right, tighten lock-nut E.

